



TRAVESSERA DE DALT, 69

08024 BARCELONA

TELF: 902 197 201 FAX: 93 285 30 59

www.posiberica.com

sat@posiberica.com

CONFIGURAR EPSON TM-T88V CON INTERFACE DUAL

Apagar la impresora. Pulsar el botón 'feed' y encenderla con el botón pulsado. Soltar cuando imprima el 'selftest'¹

A continuación pulsar más de un segundo el botón 'feed'. Así en modo configuración e imprime el 'Mode Selection'². Hacer 3 pulsaciones cortas y una larga de más de un segundo y entonces imprime 'Customize Value Setings' Pulsar 10 veces corto y una larga de más de un segundo. Entonces imprime '10. Interface Selection' Pulsar 3 veces corto y uno largo de más de un segundo. Entonces imprime '10. Interface Selection / Auto / Saved. You can turn off the printer.'³

Firmware Version 30.13 ESC/POS

Serial Interface

Baud rate : 9600 bps
Data bits : 8 bits
Parity : none
Stop bit : 1 bit or more
Handshaking : DTR/DSR
Receive error: prints '?'

Buffer Capacity
4K bytes

Handshaking Operation (busy condition)
Offline or receive buffer full

Resident Character
Alphanumeric

Print Density
LIGHT [1 2 3] DARK

Maintenance Information

Thermal Head : 0.002 km
Autocutter : 5 cuts

DIP Switch 1
1 2 3 4 5 6 7 8
■■■■■■■ ■

DIP Switch 2
1 2 3 4 5 6 7 8
■■■■■■■ **

Select Modes by pressing Feed button.
Continue SELF-TEST: Less than 1 second
Mode Selection : 1 second or more

Mode Selection

Modes
0: Exit and Reboot Printer
1: NV Graphics Information
2: Receipt Enhancement Information
3: Customize Value Settings
4 or more: None

Select Modes by executing following procedure.
step 1. Press the Feed button less than 1 second as many times as the selected mode number.
step 2. Press Feed button for 1 second or more.

Customize Value Settings

Modes
0: Exit
1: Print Current Settings
2: Print Density
3: Baud Rate
4: Automatic Paper Reduction
5: Auto Paper Feed&Cut at cover close
6: Paper Width
8: Default Character
9: Embedded Font Replacement
10: Interface Selection
11: USB Interface Settings
12: Power Supply Output
13: Printing Speed
14: Other Settings

Select Modes by executing following procedure.
step 1. Press the Feed button less than 1 second as many times as the selected mode number.
step 2. Press Feed button for 1 second or more.

10.Interface Selection

Modes
0: Return to the previous menu
* 1: UIB
2: Built-in USB
] 3: Auto

] means default value.

10.Interface Selection
Auto

saved. You can turn off the printer.

Modes
0: Exit
1: Print Current Settings
2: Print Density
3: Baud Rate
4: Automatic Paper Reduction
5: Auto Paper Feed&Cut at cover close
6: Paper Width
8: Default Character
9: Embedded Font Replacement
10: Interface Selection
11: USB Interface Settings
12: Power Supply Output
13: Printing Speed
14: Other Settings

Select Modes by executing following procedure.
step 1. Press the Feed button less than 1 second as many times as the selected mode number.
step 2. Press Feed button for 1 second or more.

xit

*** completed ***